




# Kidzlane Walkie-Talkie Press-to-speak button Replacement

You will be able to replace the Press-to-speak button.

Written By: Amin

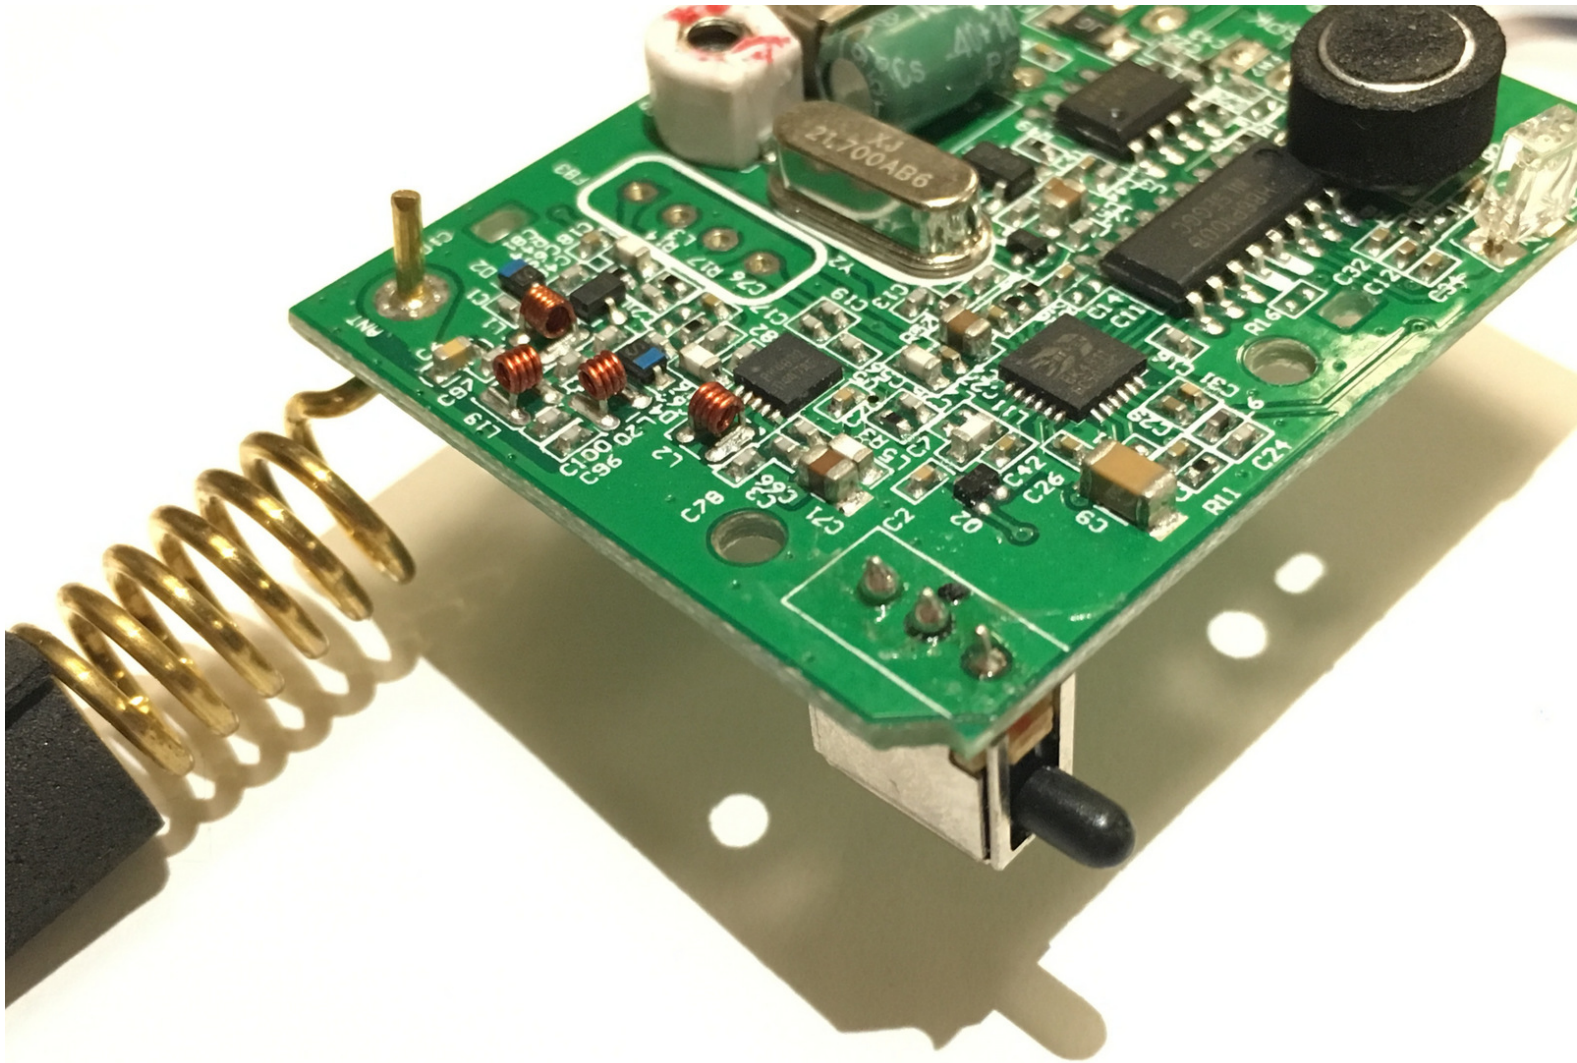

## INTRODUCTION

You will need solder device in order to be able to replace the Press-to-speak button

## Step 1 — Press-to-speak button



- Flip your device over so the bottom panel is facing up


## Step 2



- Unscrew the shown screw (4mm).





### Step 3

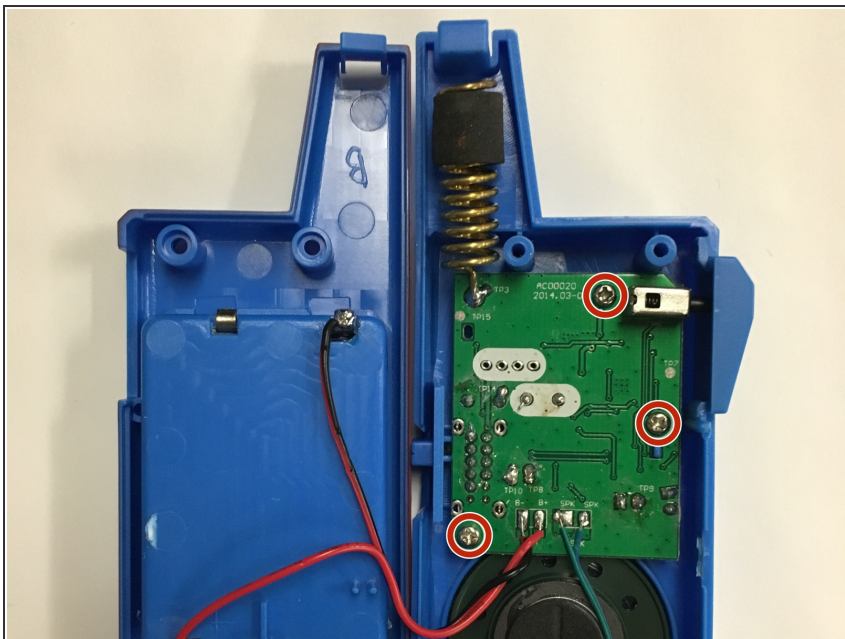

- separate the two pieces of the device. Then, unscrew the shown screws.

### Step 4

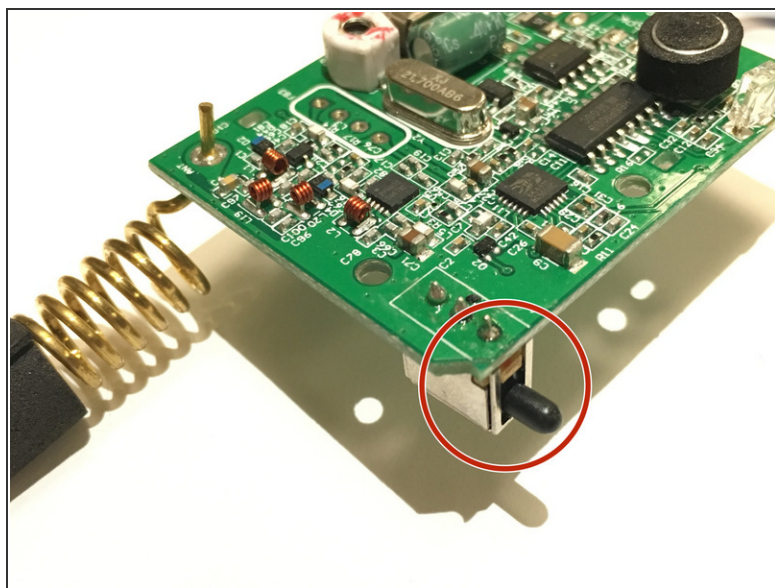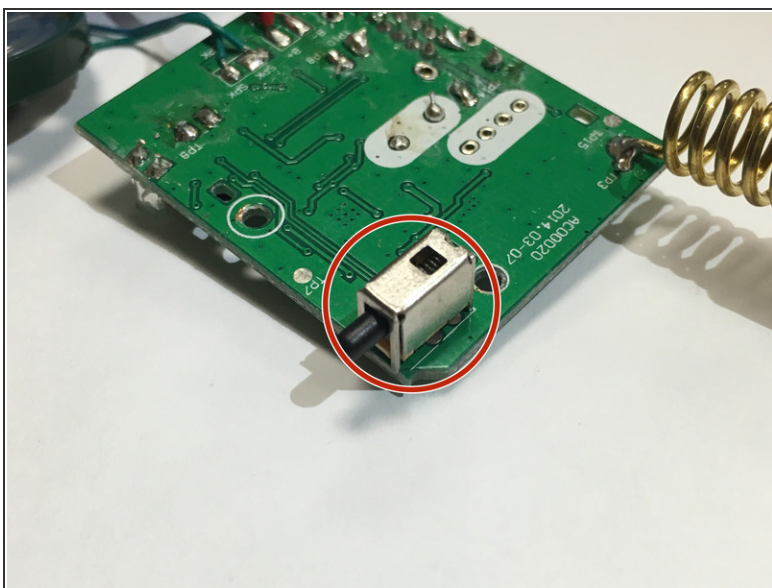

- Use the solder device to replace the broken Press-to-speak button.

To reassemble your device, follow these instructions in reverse order.

